

Manual Futuro Wallbox



timberlab

natural outdoor solutions

www.timberlab.eu

Timberlab B.V.
Harskamperweg 32
6731 AB Otterlo

Follow this installation guide for a safe installation.

General

- Follow this installation guide for a safe installation.
- Installation and connection of the lighting armature should be done by a certified installer
- Disable main supply before starting installation activities!
- Timberlab is not responsible for adjustments or modifications on the armature
- The armature is not dimmable!
- The earthing will be (is) connected to the RVS lid
- We do not recommend the use of concrete mortar for filling in the area around the column. If necessary/derivable, depending on the type of soil a stabilising sand can be applied.

Maintenance advice

The wood does not require any maintenance. In the course of time, the wood will grey in a natural way. If a treatment is chosen, a moisture regulating surface treatment should always be applied. Ask your supplier for advice! If desired, the LED module can be cleaned with a soft brush.

Warranty

The product comes with a two-year guarantee. Wood is a natural product. This wood is, unless expressly stated otherwise, fresh, undried, sawn and/or planed (if applicable). No further woodworking was performed. There is always a chance of warping and/or (dry) cracking of the wood. This may occur upon delivery or later. This is not a production error but a natural characteristic of the wood. Warranties do not apply for this.

Product	Wood species	Certification	In ground/ post holder	Colour temperature	Version	Voltage	Variations
				K		VAC	
Futuro Wallbox (78)	Oak (3)	N/A (0)	L1+600mm (00)	N/A (0)	32mm hole (0)	230V (1)	N/A (00)
		PEFC (2)					


The product code is generated by selecting the options and taking the number in brackets ().



Futuro wallbox excl cable


1. Screw

Unscrew the stainless steel lid

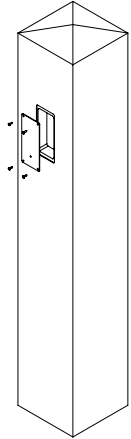


2. Detach

Remove the nut with the thread from the post. You can now pull the wallbox out of the post at the front

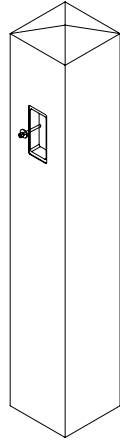

3. Connect

Connect the wallbox. Follow the wallbox manual when doing this.

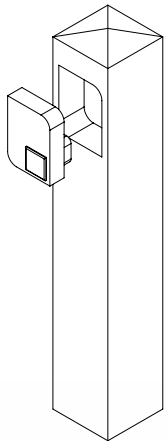


4. Mount

Place the wallbox back in. Tighten the thread and the nut and screw the lid back on.




5. Drilling

Drill or dig holes in the ground.

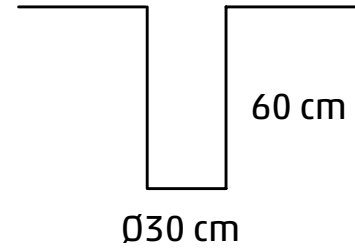

6. Place

Place the Futuro in the hole.

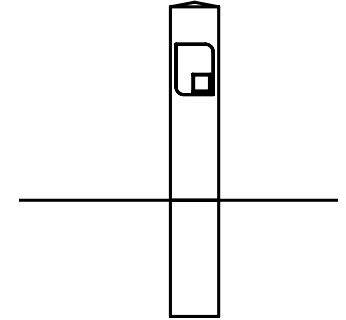

CE

19-04-2022